

# RX LCD Counterbalance Keyboard, the new movement in wall arms.

*The next-generation in articulating wall mounted arms offering a space-saving solution without compromising the space and freedom of the clinicians unique work environment.*


*Simple. Versatile. Precise.*



.....  
This Sleek LCD/Keyboard Combo extends and retracts through a range of 40 1/2". This mount provides ergonomic comfort for a variety of users. This workstation is perfect in areas where interference and space may be an issue.  
.....

Manufactured with 95% aluminum materials & finished with durable anti-microbial paint that complies with infection control polices.

## RX LCD Counterbalance Keyboard

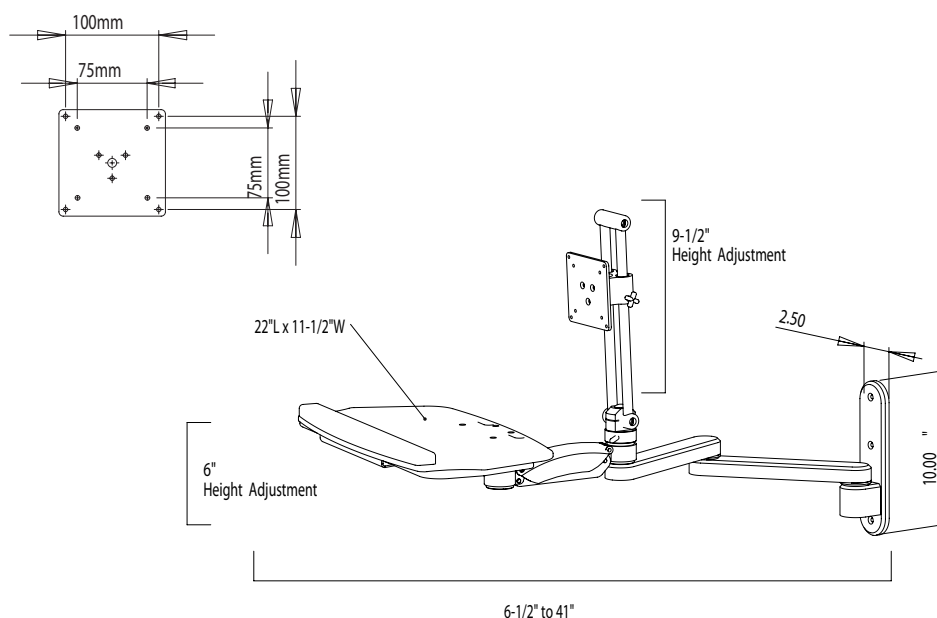

### Space-Saving. Heavy-Duty. Streamlined.

- o This Sleek LCD/Keyboard Combo extends and retracts through a range of 40 1/2". This mount provides ergonomic comfort for a variety of users. This workstation is perfect in areas where interference and space may be an issue.
- o Sliding Tray with wrist rest provides left & right work surface with upgraded flip up feature included
- o LCD and Keyboard rotate independently
- o LCD tilts, glides up or down on 13" rails

### Additional Information:

- o One-touch height adjustable Keyboard, provides maximum comfort for users
- o Full range of ergonomic adjustment including tilt and rotation for monitors up to 25 lbs
- o Designed to fold up against the wall
- o Display and keyboard rotate independently for shared viewing
- o One-touch vertical adjustment of keyboard tray with spring arm
- o Rail slider allows for smooth LCD adjustment of tilt and rotation
- o Cable management routed under the arm keeps them out of the way
- o Keyboard tray is powder coat anti-microbial paint which compliments Health care environments

**EnovateIT**  
1250 Woodward Heights  
Ferndale, Mi 48220-1427  
p. (877)258-8030 f. (847)890-6131

[www.enovateit.com](http://www.enovateit.com)  
[salesrequest@enovateit.com](mailto:salesrequest@enovateit.com)

©2008 EnovateIT LLC. All Rights Reserved

Developed & Manufactured  
by Mediamounts Ltd.

**RX LCD Counterbalance Keyboard** provides the needed flexibility to access patient data at the point-of-care.

**EnovateIT**

Providing clinicians the right technology to deliver the best care.